

Cleanroom

Ionization for Life Science Manufacturers

- REDUCE YIELD LOSSES
- IMPROVE PRODUCT QUALITY

Ionization Solutions
WWW.SIMCO-ION.COM



Medical Device

Pharmaceutical

Biotech

IONIZATION FOR EVERY APPLICATION TO CONTROL PARTICULATE CONTAMINATION

For Product Assembly or Packaging Areas

Simco-Ion's AirForce Model 6115 Blow-off Gun's substantial power makes the AirForce effective in removing particle contamination and ideal for use in clean process applications such as medical device assembly. The 6115 is the only gun product rated at ISO Class 4 cleanliness. Steady-state DC ion emission provides efficient ionization with an average discharge time of less than 1.0 second.

The AirForce's lightweight, flexible air hose—just 3/8" in diameter—moves with the operator and makes work easier. No high voltage cable means improved operator safety. The gun's ergonomic design—with a light touch trigger and easy-view LED—minimizes fatigue and eliminates wrist hyperextension.



For Cleanrooms

Simco-Ion's **Room Ionization System Model 5511** Ceiling Emitters, along with the Model 5520 & 5580 digital controllers, are designed to provide uniform ionization throughout a gowning room and the open areas of a cleanroom. Mounted onto the ceiling surface or inside a flush mount channel, Model 5511 ceiling emitters maintain aesthetics without disrupting cleanroom laminar airflow or compromising the integrity of operating ISO class 1 cleanrooms.

The 5511 digital ceiling emitter system has specifically proved its success in addressing Current Good Manufacturing Practices (CGMP) regarding contamination control by the FDA.



Ceiling Emitters in Gowning Room



Ceiling Emitters in Production



For Mini-Environment & Benchtop Areas


Simco-Ion's Guardian CR2000 Blower is designed specifically for use in cleanroom applications. The Guardian CR2000 features a patented circuit that results in equal delivery of positive and negative ions, which ensures that the targeted area will maintain in a neutralized, stable voltage balance. The Guardian CR2000 is designed to be placed above tables in each step of your product assembly process in final packaging and in inspection areas.

The Guardian CR2000 ensures cleanroom compatibility using specially chosen components and materials. All fan and air bearing surfaces are manufactured free of silicones. Fan assemblies are particle tested to ISO 14644-1 Class 4 (Fed Std. 209E Class 10) particle limits.




Case Studies: Yield Improvements

Catheter Manufacturer. This is a 9 month case study for a major catheter manufacturer. Historically, their yield losses from particulate contamination were approximately 15%.

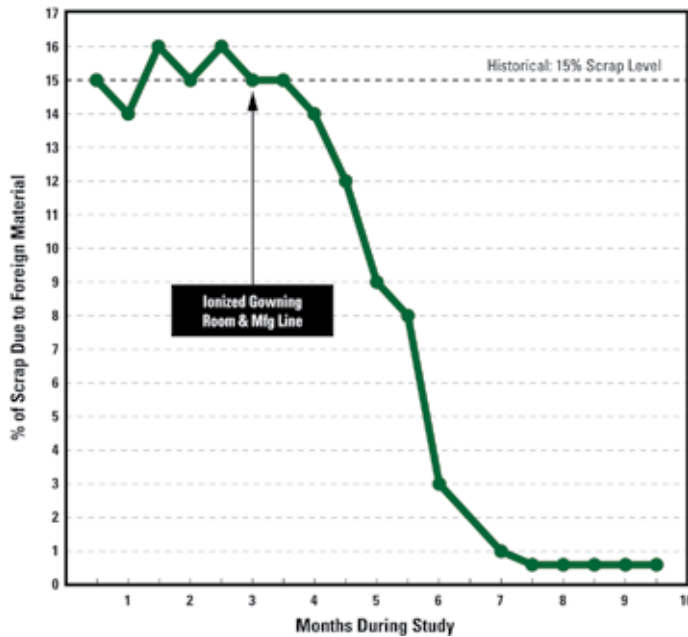

Results: Yield losses reduced to 0.5% level.

Endoscope Manufacturer. This is a 9-month case study for a major endoscope assembly manufacturer. Historically, their rejects from particulate contamination were approximately 5%.

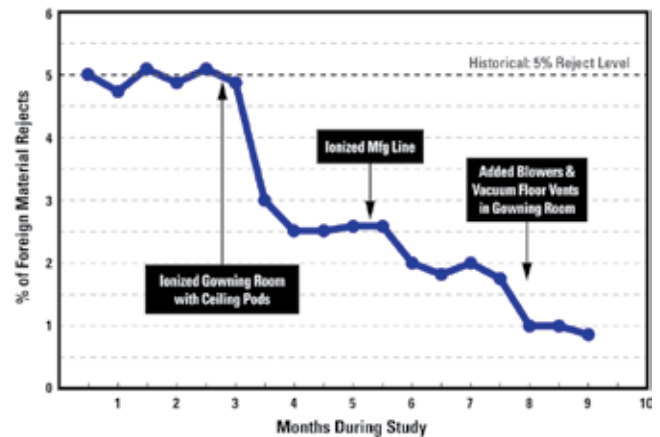

Results: Yield losses reduced to 1.0% level.

Effect of Adding Ceiling Ionization



Technical Audits

For qualified life science customers, Simco-Ion will conduct a no cost audit of the cleanrooms in your manufacturing operations and recommend an ionization solution to address your particulate contamination concerns. Ask your local regional sales manager for details and qualification.

Call Sales Services at (510) 217-0460.

Since 1936 and as a division of ITW, Simco-Ion provides a global perspective with technical support and strategic manufacturing locations in the United States, China, the Netherlands and Japan. Simco-Ion has the ability to deliver years of research, applications engineering, and field experience that add up to a comprehensive understanding of ionization technology for your CGMP manufacturing operations.




Simco-Ion

Technology Group
1601 Harbor Bay Parkway, Ste 150
Alameda, CA 94502

Tel: 510.217.0600
Tel: 800.367.2452 (in USA)

ioninfo@simco-ion.com
www.simco-ion.com

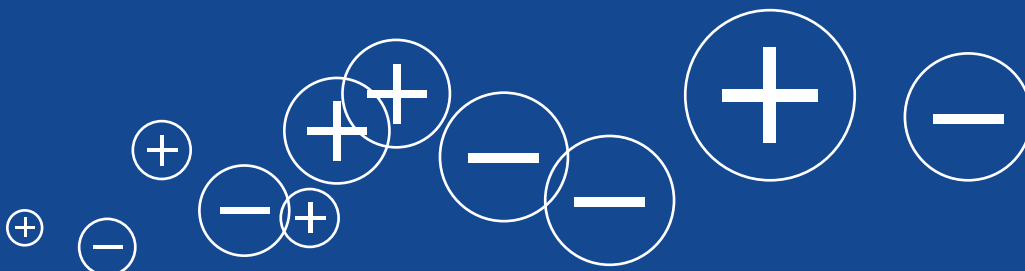

Specifications are subject to change without notice.
© 2016 Simco-Ion All rights reserved.

w o r l d w i d e l e a d e r s i n s t a t i c c o n t r o l